

FUNKEY

00062348 - Funkey MGP-30 BK Mini Toy Grand Piano black

00064840 - Funkey MGP-30 WH Mini Toy Grand Piano white



Operating instructions

Revision: 12-2021

© 2020

These operating instructions are protected by copyright. Reproduction of these operating instructions, even in part, is only permitted with the permission of Musikhaus Kirstein GmbH. The same applies to the reproduction or copying of images, even in modified form.

Content

Safety precautions and precautionary measures.....	2
Assembly instructions	3
.....	4

Safety precautions and precautionary measures



Always place the appliance securely on a level surface to avoid injury from the appliance falling over.



Do not place any devices that can heat up (e.g. lighting equipment or fog machines) on the unit.

Do not clean the plastic housing with solvents or other chemical-based cleaning agents.

Keep the unit away from rain and moisture.

Damage caused by non-compliance with this user manual is not covered by the warranty. The dealer accepts no liability for any resulting defects or problems.

Make sure that no objects or liquids of any kind get into the unit.

Protect the unit from hard impacts.

Do not expose the unit to direct sunlight, place it near heat-emitting devices, leave it in a closed vehicle or otherwise expose it to extreme temperatures. Excessive heat may deform, discolor or damage the unit.

For daily cleaning, wipe the unit with a soft, dry cloth or a cloth slightly moistened with water.

As sound vibrations can be transmitted through floors and walls more than expected. Be careful that these sounds do not become a nuisance to neighbors, especially at night and when using headphones.


Assembly instructions



A.) Music stand	1 piece
B.) Stand	1 piece
C.) Support legs (front)	2 pieces
D.) Support legs (rear)	2 pieces
E.) Mini-piano	1 piece
F.) Cross nut bolt	6 pieces
G.) Self-tapping wood screws M5 x 35	2 pieces
H.) Hexagon socket screw M6 x 50	4 pieces
I.) Hexagon socket screw M6 x 70	2 pieces
J.) Seat piano bench	1 piece
K.) Legs piano bench	4 pieces

Workflow:

- Open the packaging with a knife and remove all components. Compare the components with the parts list above.
- Assemble the components as described in the pictures below and then screw them tight.
- Insert all cross-nut bolts (F.) into the holes provided in components C. and K.. so that the internal thread faces upwards.

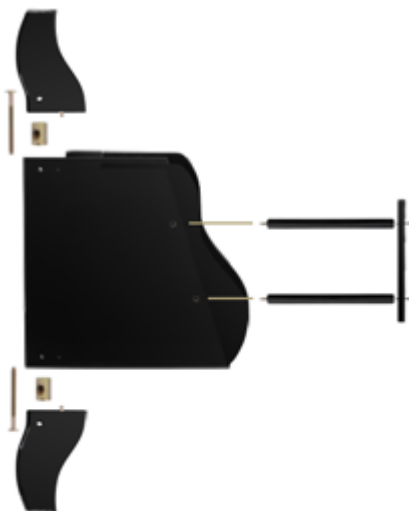

1. Turn the piano upside down and fix the components (C.) with the screws (L.). Screw components (D.) into the internal threads recessed for this purpose.



Fasten component (B.) with the supplied wood screws component (G.) **IMPORTANT! Make sure that the screws are screwed in centrally.**



The dowels of the legs (K.) must go into the drilled hole. The legs are fixed by the screws (H.).

 **KIRSTEIN.de**

Kirstein Music House GmbH
Bernbeurener Street 11
86956 Schongau - Germany
Phone: 0049-8861/909494-0
Fax: 0049-8861/909494-19

