

Thank you for purchasing the Pronomic ADC-34 Adapter Case. To ensure you will be completely satisfied with this product, read and understand these manual carefully before use. Keep the manual in a safe place. The Operating Manual must be passed on to all subsequent users.



Children should be supervised to ensure that they do not play with the appliance.

All information contained in this Operating Manual is accurate to the best of our knowledge and belief. Neither the author nor the publisher, however, can be held liable for damages or losses that arise in connection with the use of this Operating Manual or caused by improper use of the product.

Scope of delivery

1. 2x Pronomic AD-JSXF Jack stereo / XLR female (00065745)*
2. 2x Pronomic AD-JFJF Jack female / Jack female (00065756)*
3. 2x Pronomic AD-JFXF Jack female / XLR female (00065753)*
4. 2x Pronomic AD-JFXM Jack female / XLR male (00065752)*
5. 2x Pronomic AD-XFXF XLR female / XLR female (00033291)*
6. 1x Pronomic AD-XF5XM3 XLR female 5-pin / XLR male 3-pin (00067350)*
7. 1x Pronomic AD-XF3XM5 XLR female 3-pin / XLR male 5-pin (00067352)*
8. 2x Pronomic AD-XXM XLR male / XLR male (00033292)*
9. 2x Pronomic AD-SPFSPF Speaker Adapter (00067361)*
10. 2x Pronomic AD-JFSPM Jack female / Speaker male (00067396)*
11. 2x Pronomic AD-JFJS Jack female / Jack stereo (00067354)*
12. 4x Pronomic AD-CFJM Cinch female / Jack mono(00067353)*
13. 2x Pronomic AD-CFXM Cinch female / XLR male (00065755)*
14. 2x Pronomic AD-CFXF Cinch female / XLR female (00065754)*
15. 2x Pronomic AD-CMXF Cinch male / XLR female (00065748)*
16. 2x Pronomic AD-CF2MC 2x Cinch female / Cinch male (00067356)*
17. 2x Pronomic AD-CF2CF2 2x Cinch female / 2x Cinch female (00067358)*

***You can find all single adapters under this article number at www.kirstein.de**

Intended use

Important safety instructions

- Never operate your appliance when it has fallen.
- Never dismantle your appliance. An incorrectly repaired appliance can be dangerous for the user. If you encounter any problems, contact one of the Approved Service Centers in our customer service network.
- The warranty expires in case of damage caused when the product is not used as intended.
- Never use the adapter during wetness.

MAINTENANCE

Your appliance does not require any particular maintenance. However, in the event of a malfunction, **contact our Service Center.**

CLEANING

Use a lint free cloth.

WEEE Declaration (Waste of Electrical and Electronic Equipment)

Your product has been designed and manufactured using quality materials and components that are recyclable and reusable. The symbol means that your product must be disposed separately from household waste at the end of its service life.

Dispose of this equipment at your local collection point or recycling center.

Please help to protect the environment in which we all live.

All specifications and appearances are subject to change without notice. All information was correct at time of printing. Musikhaus Kirstein GmbH does not guarantee for the accuracy or completeness of any description, photograph or statement contained in this manual. Printed colors and specifications may vary slightly from product. Products from Musikhaus Kirstein GmbH are only sold through authorized dealer. Distributors and dealers are not agents of Musikhaus Kirstein GmbH and have no authority to bind Musikhaus Kirstein GmbH legally in any way.

 **KIRSTEIN.de**

Musikhaus Kirstein GmbH

Bernbeurener Str. 11

86956 Schongau – Germany

Telefon/Phone: 0049-8861-909494-0

Telefax/Fax: 0049-8861-909494-19

