



GA-30/60 Mark Guitar Amplifier



Operating instructions

Art. No.: 00056219 / 00078915

Version 12/2021

Thank you for choosing the GA-30/60.

Please read this manual carefully to take full advantage of the practical features of the GA-30/60. We also recommend that you keep this manual in a safe and easily accessible place for future reference.

Before switching on and using the appliance for the first time, be sure to read the safety instructions to avoid injury or damage to the appliance.

Content

Safety precautions and precautionary measures.....	3
GA-30 Mark - Connections and operation	4
GA-60 Mark - Connections and operation	5
WEEE Declaration	6

Safety precautions and precautionary measures



Always place the appliance securely on a level surface to avoid injury from the appliance falling over.



Do not place any devices that can heat up (e.g. lighting equipment or fog machines) on the unit.



Never touch the mains cable or the unit when it is wet, as this may cause an electronic shock.

Do not clean the housing with solvents or other chemical-based cleaning agents.

Keep the unit away from rain and moisture.

Damage caused by non-compliance with this user manual is not covered by the warranty. The dealer accepts no liability for any resulting defects or problems.

Before connecting, make sure that the mains cable is in perfect condition.

Only touch the mains cable by the plug.

Avoid contact of the mains cable with other cables.

Do not bend or twist the cable and do not place any objects on it.

Always use this device at an appropriate volume, as high volumes can damage your hearing in the long run. If you experience hearing problems or ringing in your ears, consult a specialist immediately.

Make sure that no objects or liquids of any kind get into the unit.

Disconnect the unit from the mains during thunderstorms.

Switch off the unit immediately and unplug the mains adapter from the socket if:


- The power supply unit, the power cable or the plug is damaged
- Smoke or unusual odour occurs
- Objects have fallen into the unit or liquid has been spilled on the unit.
- The unit has been exposed to moisture
- The unit does not function properly or there is a significant change in performance

Do not leave guitars connected to the amplifier with the volume turned up.

Neon tubes or UV light sources in the immediate vicinity can produce a slight hum.


Only plug in headphones when the unit is switched off.

GA-30 Mark - Connections and operation

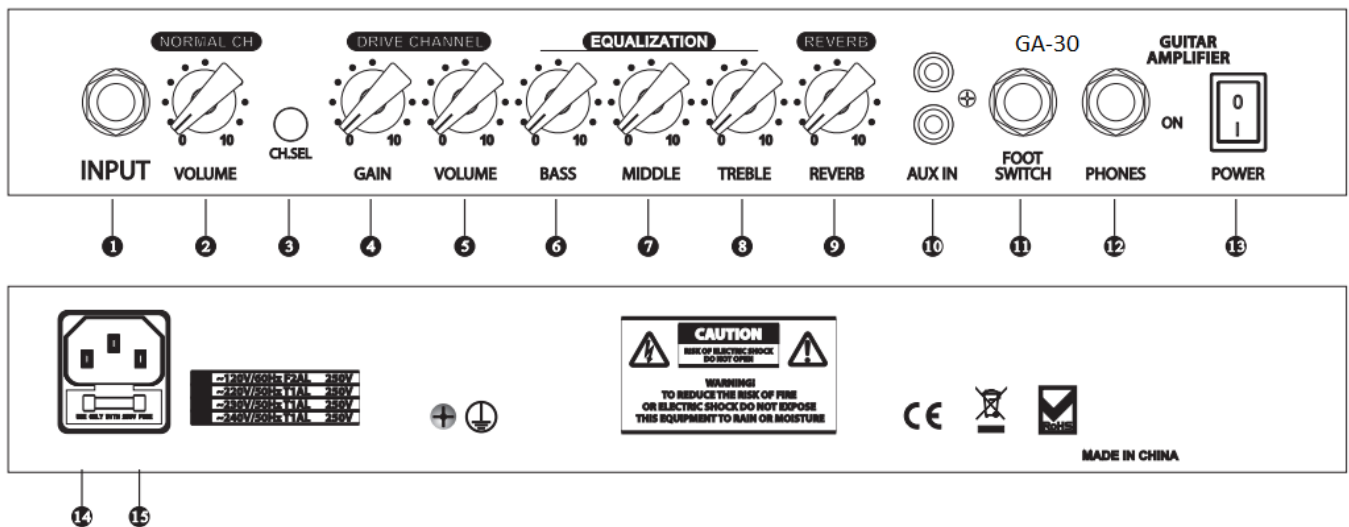

1. **Guitar input:** Connect your guitar here via a 6.3 mm jack cable.
2. **Volume control (Norm. Ch.):** Adjust the volume of the Clean channel here.
3. **Channel selection knob:** Select here between the Clean and Drive (distorted) channels.
4. **Gain control (Drive channel):** Select the intensity of the gain (distortion) here.
5. **Volume control (Drive Ch.):** Adjust the volume of the drive channel here.
6. **Bass control:** Adjusts the amount of bass in the mix.
7. **Mids control:** Adjusts the amount of mids in the mix.
8. **Treble control:** Adjusts the amount of treble in the mix.
9. **Reverb control:** Adjusts the amount of reverb effect.
10. **AUX input:** Connect an AUX-capable device (e.g. mobile phone) here.
11. **Foot pedal connector:** Connect an external foot pedal to this connector to switch between clean and drive channels.
12. **Headphone jack:** Connect your headphones to the amplifier here.
13. **On/Off switch:** Use this to switch the unit on or off.
14. **Fuse**
15. **Power connection:** Connect the supplied mains cable here.

GA-60 Mark - Connections and operation

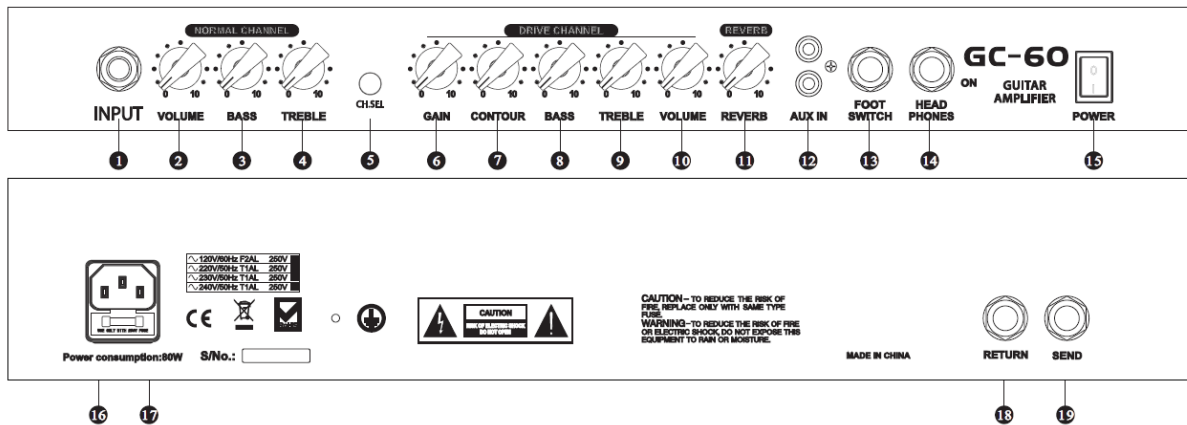

1. **Guitar input:** Connect your guitar here via 6.3 mm jack cable.
2. **Volume control (Norm. Ch.):** Adjust the volume of the Clean channel here.
3. **Bass control (Norm. Ch.):** Adjusts the amount of bass in the Clean channel.
4. **Treble control (Norm. Ch.):** Adjusts the amount of treble in the Clean channel.
5. **Channel selection knob:** Select here between the Clean and Drive (distorted) channels.
6. **Gain control (Drive Ch.):** Select the intensity of the gain (distortion) here.
7. **Drive Contour:** Set the type of distortion here.
8. **Bass control (Drive Ch.):** Adjusts the amount of bass on the Drive channel.
9. **Treble control (Drive Ch.):** Adjusts the amount of treble in the Drive channel.
10. **Volume control (Drive Ch.):** Adjust the volume of the drive channel here.
11. **Reverb control:** Adjusts the amount of reverb effect.
12. **AUX input:** Connect an AUX-capable device (e.g. mobile phone) here.
13. **Foot pedal connector:** Connect an external foot pedal to this connector to switch between clean and drive channels.
14. **Headphone jack:** Connect your headphones to the amplifier here.
15. **On/Off switch:** Use this to switch the unit on or off.
16. **Power information:** Information about the required power supply.
17. **Power connection:** Connect the supplied mains cable here.
18. **Return:** Connect the output of external effect processors here.
19. **Send:** Connect the input of external effect processors here.

WEEE Declaration



Your product has been designed and manufactured with high quality materials and components that can be recycled and reused. This symbol means that electrical and electronic equipment must be disposed of separately from household waste at the end of its useful life. Please dispose of this appliance at your local municipal collection point or recycling centre. Please help to preserve the environment in which we live.

Subject to technical changes and changes in appearance. All information is correct at the time of going to press. Musikhaus Kirstein GmbH accepts no responsibility for the accuracy and completeness of the descriptions, illustrations and information contained therein. Colours and specifications shown may differ slightly from the product. Musikhaus Kirstein GmbH - products are only available through authorised dealers. Distributors and dealers are not authorised agents of Musikhaus Kirstein GmbH and have no authority to legally bind Musikhaus Kirstein GmbH in any way, either expressly or by implication. These operating instructions are protected by copyright. Any duplication or reprinting, even of extracts, and any reproduction of the illustrations, even in modified form, is only permitted with the written consent of Musikhaus Kirstein GmbH.

 **KIRSTEIN.de**

Musikhaus Kirstein GmbH
Bernbeurener Str. 11
86956 Schongau - Germany
Telefon/Phone: 0049-8861-909494-0
Telefax/Fax: 0049-8861-909494-19

