

STEINMAYER

M-03G - Mechanical metronome with bell

Thank you for choosing this product. To ensure that you are fully satisfied with this product, carefully read and understand these operating instructions before using the product. Keep these operating instructions in a safe place. The operating instructions must be passed on to all subsequent users. All person-related wording in this operating manual is to be regarded as gender-neutral. This operating manual applies to mature persons and users who have been supervised or instructed in the operation of the device by a person responsible for their safety and who have demonstrated that they can handle the device. Children should be supervised to ensure that they do not use this device as a toy. Never allow children to play with the packing material unsupervised. Risk of property damage! We are not liable for accidents that occur as a result of failure to observe the safety instructions or as a result of incorrect handling. All information in this operating manual has been checked to the best of our knowledge and belief. However, neither the author nor the publisher can be held liable for any damage related to the use of these operating instructions.

Caution. Please observe the following basic instruction in order not to endanger yourself or others and to avoid damage.

Warning: Do not disassemble or make any modifications to the product.

© 2021

These operating instructions are protected by copyright. The reproduction of these operating instructions, even in part, is only permitted with the approval of Musikhaus Kirstein GmbH. The same applies to the reproduction or copying of images, even in modified form.

Operating Tip:

Always place the metronome on a stable, level surface to ensure a secure stand and smooth running.

Removing the protective cap:

To remove the protective cap, move the slider (A) down in the direction of the arrow. Then flip the protective cap forward to remove it.

Closing the protective cap:

To close the protective cap, place it with the underside in the opening of the housing. Then fold the protective cap towards the housing and lock it by moving the slider (A) upwards in the opposite direction to the arrow.

Winding the mechanical spring:

Turn the watch key clockwise to wind the mechanism spring. Stop the rotation as soon as the resistance noticeably increases. Never turn the watch key with force.

Metronome Start:

To start the metronome, carefully release the pendulum from its detent. To do this, push the upper end of the pendulum slightly backwards towards the metronome housing and then move the pendulum to the left or right side stop. Now release the pendulum to start the metronome.

Metronome Stop:

To stop the metronome, gently catch the pendulum and guide it back to the center position. Lock it in place by moving the top end of the pendulum back and sideways under the holding lug.

Tempo Adjustment:

The tempo can be changed by sliding the shifting weight on the pendulum. Moving the weight up slows the metronome speed. Moving the weight downward increases the metronome speed. There is a scale on the pendulum. The upper edge of the shifting weight marks the selected speed in BPM (beats per minute).

Set time signature:

By moving the selector switch on the left side of the housing, a bell can be activated. This allows you to emphasize the first beat of a 2, 3, 4 or 6 beat bar.

Largo	40 - 60
Larghetto	60 - 66
Adagio	66 - 76
Andante	76 - 108
Moderato	108 - 120
Allegro	120 - 168
Presto	168 - 200
Prestissimo	200 - 208

