

# McGrey Rockit ST-Gitarrenset

ArtNr.: 00041432 (sunburst), 00041433 (schwarz), 00055866 (weiß), 00055867 (rot)

## Einführung


Vielen Dank daß sie sich für das **McGrey Rockit ST-Gitarrenset** entschieden haben. Bitte befolgen Sie die Anweisungen in dieser Anleitung und sie werden lange Zeit Freude an Ihrem Set haben

**Packungsinhalt:** McGrey ST-Style E-Gitarre, McGrey GA-10 Gitarrenverstärker, Clip-Tuner  
Gitarrengurt, Gitarrenkabel, Gitarrentasche, Plektren (2 Stk.), 1 Satz Ersatzsaiten

## Vorsichtsmaßnahmen

- 1) Lesen Sie diese Anleitung vor dem Einschalten genau durch
- 2) Bitte befolgen Sie alle Vorsichtsmaßnahmen und heben Sie diese Anleitung auf um gegebenenfalls darin zu einem späteren Zeitpunkt nachlesen zu können.
- 3) Vermeiden Sie Kontakt mit Feuchtigkeit und Wasser. Verwenden Sie zum Reinigen nur ein trockenes, weiches Tuch
- 4) Vermeiden Sie die Nähe von Wärmequellen, wie Heizgeräten oder direkte Sonneneinstrahlung.
- 5) Öffnen Sie das Gerät nicht und lassen Sie alle eventuellen Reparaturen von Fachpersonal ausführen. Sollte das Gerät beschädigt sein, Wasser eingedrungen sein oder sonstige Defekte aufweisen bringen Sie das Gerät zum Hersteller oder in eine Fachwerkstatt.
- 6) Entsorgen Sie leere Batterien nur an dafür vorgesehenen Sammelstellen und nicht im Hausmüll


## Gitarre: Funktionen und Bedienung

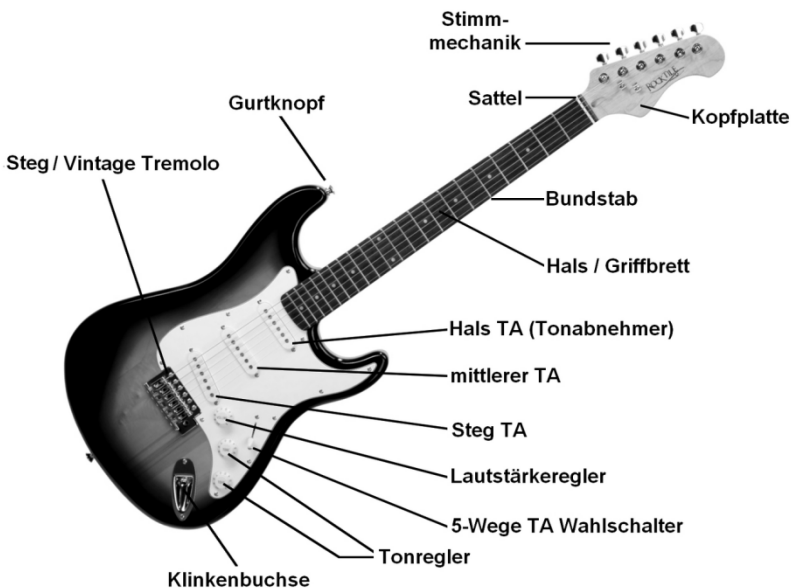

**Volume Regler:** Mit diesem Regler können Sie die E-Gitarre lauter und leiser drehen. Die beiden **Tonregler** lassen den Gitarren-Ton heller oder dumpfer klingen. Mit dem **5-Wege Schalter** können Sie zwischen den einzelnen Tonabnehmern hin und her schalten und somit den Sound beeinflussen.

Mit dem Steg-TA werden mehr Höhen abgenommen, der Hals-TA betont die Tiefen (Bässe). Wenn Sie das Tremolo benutzen möchten, dann drehen Sie den beigefügten **Tremolo-Hebel** vorsichtig in das Tremolo System (Steg). Durch vorsichtiges Drücken oder Ziehen des Hebels entspannen Sie bzw. dehnen Sie die Saiten. Die Tonhöhe wird dadurch tiefer bzw. höher.


## Verstärker: Funktionen und Bedienung

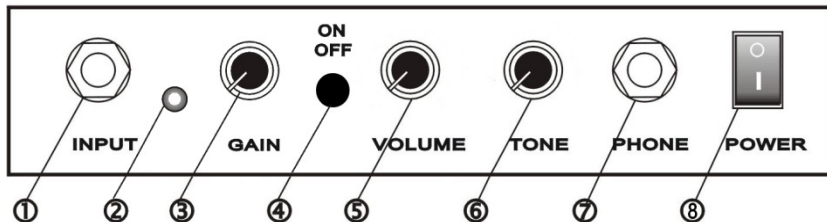

Stellen Sie sicher dass der Verstärker ausgeschaltet ist. Schließen Sie die E-Gitarre mit dem Kabel an den Verstärker **INPUT (1)** an. Drehen Sie den **Volumenregler (5)** ganz auf „0“. Schalten Sie den Verstärker ein **(8)**, die **LED (2)** leuchtet. Mit dem Regler **TONE (6)** regeln Sie die Klangfarbe des Gitarrensounds. Die Gesamtlautstärke wird mit dem **Volumenregler (5)** eingestellt. Nach dem Einschalten erhöhen Sie langsam die Gesamtlautstärke bis zum gewünschten Level. Die Kanaltaste **(4)** schaltet um zwischen Clean Sound und Overdrive (verzerrt). Mit dem **GAIN-Regler (3)** stellen Sie den Grad der Verzerrung ein, beginnen Sie in Mittelstellung. **Phone:** Anschluss für einen Kopfhörer 6.35mm Klinke. Bei Belegung wird der interne Lautsprecher deaktiviert. Reduzieren sie die Lautstärke bevor sie über den Kopfhörer spielen.

## Tuner: Funktionen und Bedienung

Tuner: Cliptuner, Stimmgerät / Blasinstrumente C, F, Bb, Eb / 89mm x 53mm x 18,5mm  
 Batterie: CR2032  
 A4 Frequenz: 430Hz ... 450Hz, Stimmbereich A0 (27,5Hz) ... C8 (4186 Hz)  
 Funktionen: C (chromatisch), G (Gitarre), B (Bass), V (Violine), U (Ukulele), W (Blasinstrument)

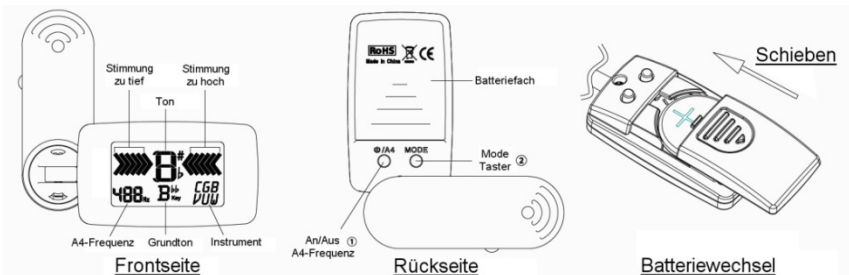

**Batteriewechsel:** Öffnen Sie das Gerät auf der Rückseite und legen Sie die Batterie ein. Achten Sie auf richtige Polung. Schließen Sie den Batteriefachdeckel. Zum Einschalten drücken Sie den An/Aus Taster (1) ca. 1 sec lang. Mit dem Modetaster (2) wählen Sie Ihr Instrument C/G/B/V/U/W aus. Wenn sie im Betriebsmodus Blasinstrumente (W) sind können Sie durch dauerhaftes Drücken von Taster (2) den Grundton (C, F, Eb, Bb) auswählen, dieser wird im Display angezeigt. Im Modus für Gitarre (G) können Sie durch dauerhaftes Drücken von Taster (2) die Stimmungen Flat b und bb auswählen. Wenn Sie die Taste (1) mehrmals kurz drücken können Sie die Grundfrequenz für den A4 Ton zwischen 430Hz und 450Hz wählen. Befestigen Sie das Stimmgerät an Ihrem Instrument und spielen Sie einen Ton an. Die Anzeige >>> zeigt Ihnen eine zu tiefe Stimmung an, bei <<< ist die Stimmung zu hoch. Der aktuelle Ton wird in der Anzeige angezeigt. Zum Ausschalten drücken Sie den Taster (1) für ca. 1 sec, wenn Sie länger als 3 Minuten keine Taste drücken, schaltet sich das Gerät automatisch aus.

Musikhaus Kirstein GmbH  
 Bernbeurener Strasse 11  
 86959 Schongau / Germany  
 Phone 0049-8861-909494-0 / Fax 0049-909494-19

# McGrey Rockit ST-Guitar Set

ArtNr.: 00041432 (sunburst), 00041433 (black), 00055866 (white), 00055867 (red)

## Introduction


Thank you for buying the **McGrey Rockit ST-Gitarrenset**. By following the instructions found in this user manual, you can look forward to exceptional performance from your guitar set for years to come.

**Content:** McGrey ST-Style E-Guitar, McGrey GA-10 Guitar Amplifier, Clip-Tuner  
Guitar Strap, Guitar Cord, Gig Bag, Picks (2pcs), 1 Set Spare Strings

## Safety instructions

- 1) Read these instructions before operating the unit. Please heed all safety warnings and keep these instructions for future reference. Follow all instructions.
- 2) Do not use this device near water or moisture. Clean only with dry cloth.
- 3) Do not install near any heat sources such as radiators, heat registers, stoves, or other devices that produce heat.
- 4) Do not open the device
- 5) Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as liquid has been spilled or objects have fallen into the device, the device was exposed to rain or moisture, does not operate normally, or has been dropped.
- 6) Batteries should be disposed of separately from household waste


## Electric Guitar: Specifications and operation

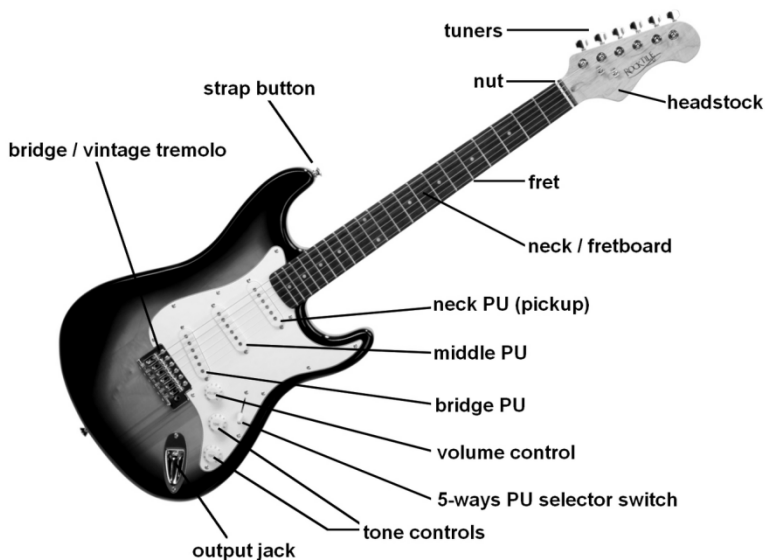

**Volume control:** adjusts overall volume of electric guitar. Use **tone controls** for adjusting guitar tone. **5-ways pickup switch** is used to select between different pickup combinations. Bridge pickup supports heights, neck pickup supports bass tones. If you want to use the tremolo system turn the tremolo bar into the bridge. By pressing

carefully the **tremolo bar** you can release strings (tuning will go down), if you drag tremolo bar you can bend the strings and tuning will go up.

## Amplifier: Specifications and operation

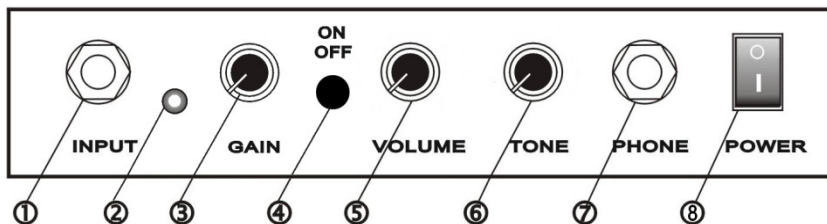

Connect your electric guitar with amplifier **INPUT (1)** jack by using the guitar cord. Make sure that **VOLUME** control (5) is set to "0" before you switch **ON** amplifier power (8). Switch on the amplifier, and the red LED (2) indicates power on. Use **TONE** control (6) to adjust tone of guitar sound. Set overall volume by using the **VOLUME** (5) control. With **channel select button (4)** you can select Clean sound or Overdrive sound. With **GAIN** control (3) you can adjust the level of distortion. Set to middle position when you start playing.

**PHONE (7):** 6.35mm headphone output jack. When headphone is used internal speaker is deactivated. Ensure that the volume control has been reduced before beginning to play with the use of the headphones, and then slowly increase the volume to comfortable listening level.


## Tuner: Specifications and operation

Rocktite CL-110: cliptuner / wind instruments tuning C, F, Bb, Eb / Size: 89mm x 53mm x 18,5mm

Battery: CR2032

A4 Frequency: 430Hz ... 450Hz, tuning range A0 (27,5Hz) ... C8 (4186 Hz)

Items of tuning: C (chromatic), G (Guitar), B (Bass), V (Violin), U (Ukulele), W (Wind instrument)

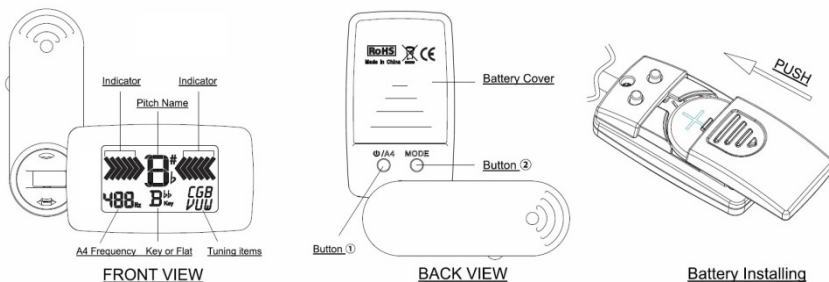

**Battery installing:** Open the device on backside and insert battery. Please mind correct polarity. Close battery cover. To power on the tuner, press On/Off button (1) for 1 sec. By slightly pressing mode button (2) you can choose the instrument C/G/B/V/U/W you want to tune. In wind instrument mode (W) you can set the keynote by constantly pressing button (2) to C, F, Eb or Bb. Keynote will be shown on LCD display. When tuner is in guitar mode (G) you can choose flat tuning modes flat b and bb by constantly pressing button (2). By pressing button (1) several times you can set A4 frequency from 430Hz to 450Hz. Clip the tuner to your instrument and play a note. Indicators >>> show flat tuning, indicators <<< show sharp tuning. Current key is displayed on LCD display. To power off your tuner press On/Off button (1) for 1 sec. The tuner will be powered down automatically if there is no button operation or signal input for more than 3 minutes.

Musikhaus Kirstein GmbH  
Bernbeurener Strasse 11  
86959 Schongau / Germany  
Phone 0049-8861-909494-0 / Fax 0049-909494-19

 musikhaus  
**KIRSTEIN.de**

