


GENELEC®

8020D


Quick Setup Guide 2-3

Operating Manual 4-9



Käyttöohje 10-15

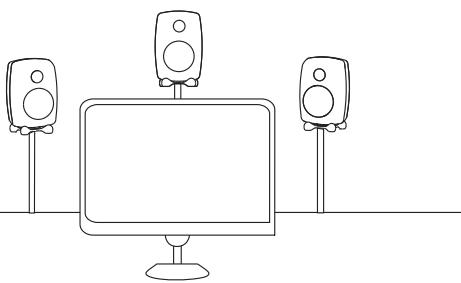



Speaker Placement

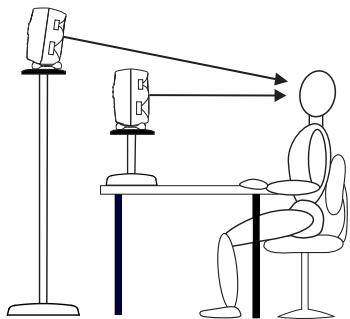





Vertical Angle

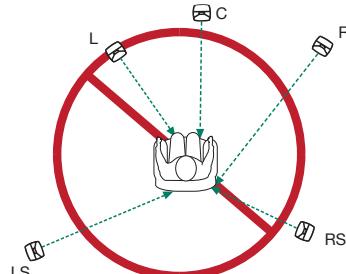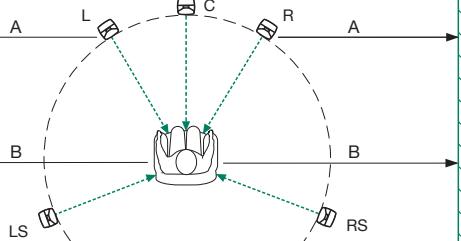

Symmetry of Room Installation

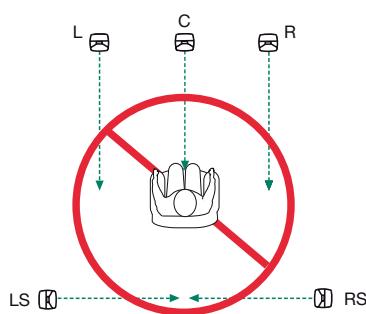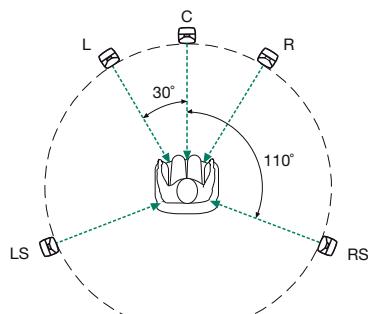


Speaker Angle and Distance

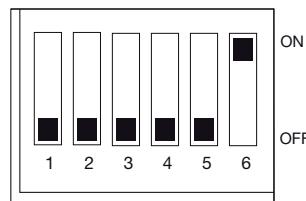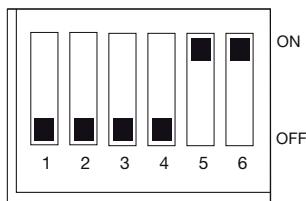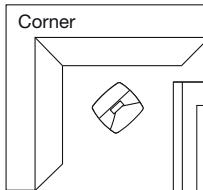


Using Tone Controls


Free standing in adamped room

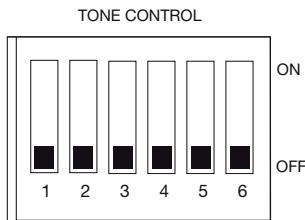

Free standing in a reverberant room

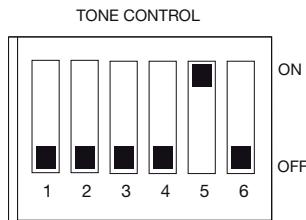

Nearfield setting

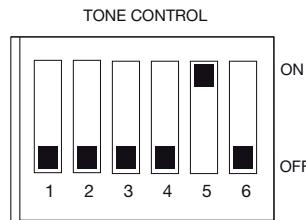

Suggested Tone Control Settings

General description

The bi-amplified GENELEC 8020D is a compact two way active monitoring loudspeaker designed for near field monitoring, mobile vans, broadcast and TV control rooms, surround sound systems, home studios, multimedia applications and also for use with computer soundcards. As an active loudspeaker, it contains drivers, power amplifiers, active crossover filters and protection circuitry.

The MDE™ (Minimum Diffraction Enclosure™) loudspeaker enclosure is made of die-cast aluminium and shaped to reduce edge diffraction. Combined with the advanced Directivity Control Waveguide™ (DCW™), this design provides excellent frequency balance in difficult acoustic environments. If necessary, the bass response of the 8020D can be extended with a Genelec subwoofer.

Positioning the loudspeaker

Each 8020D is supplied with an integrated amplifier unit, mains cable and an operating manual. After unpacking, place the loudspeaker in its required listening position, taking note of the line of the acoustic axis. The axes of all loudspeakers should converge at ear height at the listening position (see Figure 1).

Connections

Before connecting up, ensure that the loudspeakers and the signal source have been switched off. The power switch of the 8020D is located on the back panel (see Figure 3). Connect the loudspeaker to an earthed mains connection with the supplied mains cable. Never connect the loudspeaker to an unearthing mains supply or using an unearthing mains cable. The mains input accepts a wide range of voltages: 100-240

V AC 50-60 Hz.

Audio input is via a 10 kOhm balanced female XLR connector. An unbalanced source may be used as long as pin 3 is grounded to pin 1 at the unbalanced source connector (see Figure 2). Never connect the 8020D to the loudspeaker outputs of a power amplifier or an integrated amplifier or receiver.

Once the connections have been made, the loudspeakers are ready to be switched on.

ISS™ autostart function

When the power switch and the "ISS" switch on the back panel of the loudspeaker are set to "ON", the Intelligent Signal Sensing™ (ISS™) autostart function of the 8020D is active. Automatic powering down to standby mode happens after a certain time when playback has ended. The power consumption in standby mode is typically less than 0.5 watts. The playback will automatically resume once an input signal is detected from the source.

There is a slight delay in the automatic powering up. If this is undesirable, the ISS™ function can be disabled by setting the "ISS" switch on the back panel to the "OFF" position. In this mode, the monitor is powered on and off using the power switch on the back panel.

Sensitivity control

The input sensitivity of the 8020D can be matched to the output of the signal source by adjusting the rotary sensitivity control on the back panel.

Setting the tone controls

The frequency response of the Genelec 8020D can be

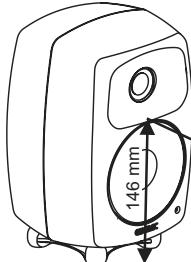


Figure 1: Location of the acoustic axis




Figure 2: Type of cable needed if unbalanced source is used (example shown is RCA output to the XLR input)

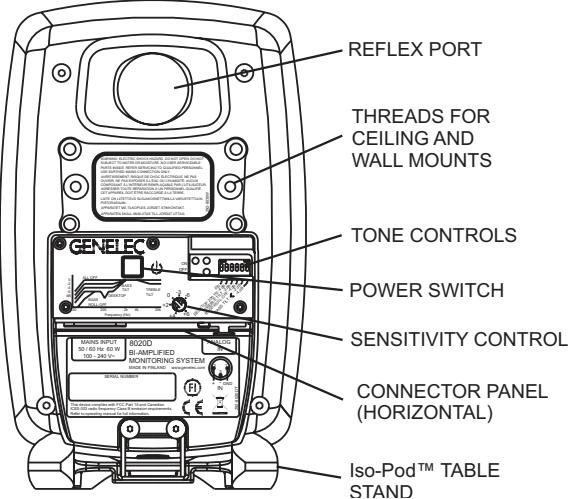


Figure 3: Control and connector layout on the rear panel of an 8020D.

adjusted to match the acoustic environment by setting the tone control switches on the rear panel. The controls are "Desktop 200 Hz", "Treble Tilt", "Bass Tilt" and "Bass Roll-Off". An acoustic measuring system is recommended for analyzing the effects of the adjustments, however, careful listening with suitable test recordings can also lead to good results. Table 1 shows some examples of typical settings in various situations. Figure 4 shows the effect of the controls on the anechoic response.

Desktop 200 Hz

The desktop low frequency control (Switch 2) attenuates the bass frequencies around 200 Hz by 4 dB. This feature is designed to compensate for the boost often occurring at this frequency range when the loudspeaker is placed upon a meter bridge, table or similar reflective surface.

Treble Tilt

Treble Tilt control (switch 3) attenuates the treble response of the loudspeaker at frequencies above 5 kHz by 2 dB, which can be used for smoothening down an excessively bright sounding system.

Bass Tilt

Bass Tilt control offers three attenuation levels for the bass response of the loudspeaker below 2 kHz, usually necessary when the loudspeakers are placed near a wall or other room boundaries. The attenuation levels are -2 dB (switch 6 "ON"), -4 dB (switch 7 "ON") and -6 dB (both switches "ON").

Bass Roll-Off

Bass Roll-Off (switch 4) activates a -4 dB filter to the lowest bass frequencies (65 Hz). This can be used for compensating

Loudspeaker Mounting Position	Desktop	Treble Tilt	Bass Tilt	Bass Roll-Off
Flat anechoic response	OFF	OFF	OFF	OFF
Free standing in a damped room	OFF	OFF	OFF	OFF
Free standing in a reverberant room	OFF	OFF	-2 dB	OFF
Near field or console bridge	ON	OFF	OFF	OFF
Near to a wall	OFF	OFF	-4 dB	OFF
On a desk	ON	OFF	-2 dB	OFF

Table 1: Suggested tone control settings for differing acoustical environments

excessively heavy bass reproduction typically caused by loudspeaker placement near room boundaries.

The factory setting for all tone controls is “OFF” to give a flat anechoic response. Always start adjustment by setting all switches to “OFF” position. Measure or listen systematically through the different combinations of settings to find the best frequency balance.

Mounting considerations

Align the loudspeakers correctly

Always place the loudspeakers so that their acoustic axes (see figure 1) are aimed towards the listening position. Vertical placement is preferred, as it minimises acoustical cancellation problems around the crossover frequency.

Maintain symmetry

Check that the loudspeakers are placed symmetrically and at an equal distance from the listening position. If possible, place the system so that the listening position is on the centerline of the room and the loudspeakers are placed at an equal distance from the centerline.

Minimise reflections

Acoustic reflections from objects close to the loudspeakers like desks, cabinets, computer monitors etc. can cause

unwanted colouration of the sound image. This can be minimised by placing the loudspeaker clear of reflective surfaces. For instance, putting the loudspeakers on stands behind and above the mixing console and tilting them down to point the acoustic axes to ear level at the listening position usually gives a better result than placing the loudspeakers on the meter bridge.

Minimum clearances

Sufficient clearance for cooling of the amplifier and functioning of the reflex port must be ensured if the loudspeaker is installed in a restricted space such as a cabinet or integrated into a wall structure. The surroundings of the loudspeaker must always be open to the listening room with a minimum clearance of 3 centimeters ($1\frac{3}{16}$ ”) behind, above and on both sides of the loudspeaker. The space adjacent to the amplifier must either be ventilated or sufficiently large to dissipate heat so that the ambient temperature does not rise above 35 degrees Celsius (95°F.)

Mounting options

The Genelec 8020D offers several mounting options: The Iso-Pod™ (Isolation Positioner/Decoupler™) vibration insulating table stand allows tilting the loudspeaker for correct alignment of the acoustic axis. On the base of the

loudspeaker is a 3/8 in UNC threaded hole compatible with a standard microphone stand. On the rear there are two M6x10 mm threaded holes for wall or ceiling brackets or the keyhole wall mount adapter provided with the loudspeaker.

Maintenance

No user serviceable parts are to be found within the loudspeaker. Any maintenance or repair of the 8020D must only be undertaken by qualified service personnel.

Safety considerations

Although the 8020D has been designed in accordance with international safety standards, the following warnings and cautions should be observed to ensure safe operation and to maintain the loudspeaker under safe operating conditions:

- Servicing and adjustment must only be performed by qualified service personnel. The loudspeaker must not be opened.
- Do not use the loudspeaker with an unearthing mains cable or an unearthing mains connection as this may compromise electrical safety.
- Do not expose the loudspeaker to water or moisture. Do not place any objects filled with liquid, such as vases on the loudspeaker or near it.
- This loudspeaker is capable of producing sound pressure levels in excess of 85 dB, which may cause permanent hearing damage.
- Free flow of air behind the loudspeaker is necessary to maintain sufficient cooling. Do not obstruct airflow around the loudspeaker.
- Note that the amplifier is not completely disconnected from the AC mains service unless the mains power cord is removed from the amplifier or the mains outlet.

Guarantee

This product is guaranteed for a period of two years against faults in materials or workmanship. Refer to supplier for full sales and guarantee terms.

Compliance to FCC rules

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment under FCC rules.

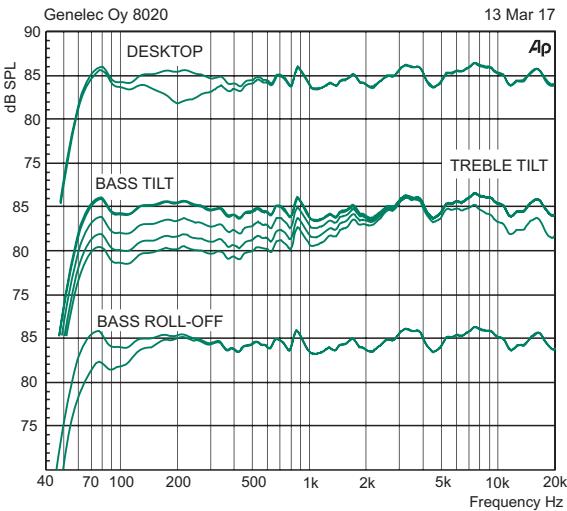


Figure 4. The curves show the effect of the “Bass Tilt”, “Treble Tilt”, “Desktop 200 Hz” and “Bass Roll-Off” controls on the free field response of the 8020D.

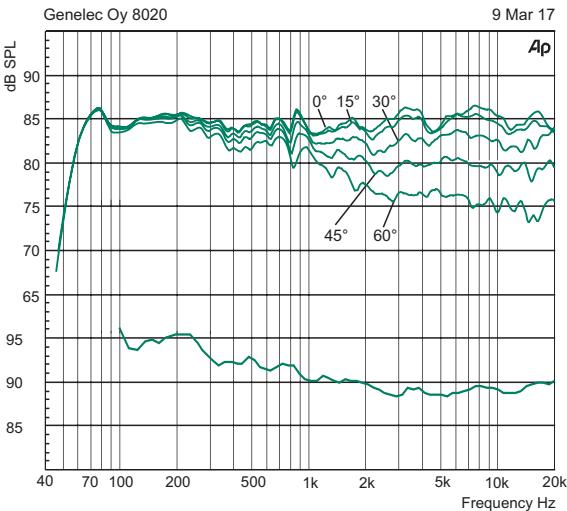


Figure 5. Frequency responses at 0, 15, 30, 45 and 60 degree angles and power response in full space. Input level -20 dBu.

SYSTEM SPECIFICATIONS

Lower cut-off frequency, -6 dB:	≤ 56 Hz
Upper cut-off frequency, -6 dB:	≥ 25 kHz
Accuracy of frequency response:	62 Hz – 20 kHz (\pm 2.5 dB)
Maximum short term sine wave acoustic output on axis in half space, averaged from 100 Hz to 3 kHz:	at 1 m ≥ 100 dB SPL
Maximum long term RMS acoustic output in same conditions with IEC weighted noise (limited by driver unit protection circuit):	at 1 m ≥ 93 dB SPL
Maximum peak acoustic output per pair, at 1 m distance with music material:	≥ 107 dB
Self generated noise level in free field at 1 m on axis:	≤ 5 dB (A-weighted)
Harmonic distortion at 85 dB SPL at 1 m on axis:	
Freq:	50...200 Hz < 3 %
	>200 Hz < 0.5 %
Drivers: Bass	105 mm (4 in) cone
Treble	19 mm ($\frac{3}{4}$ in) metal dome
Both drivers are magnetically shielded	
Weight:	3.2 kg (7.0 lb)
Dimensions: Height	242 mm (9 $\frac{1}{2}$ in) (including Iso-Pod™ table stand)
Height	230 mm (9 $\frac{1}{16}$ in) (without Iso-Pod™ table stand)
Width	151 mm (6 in)
Depth	142 mm (5 $\frac{5}{8}$ in)

CROSSOVER SECTION

Input connector: Input:	XLR female, balanced 10 kOhm, pin 1 gnd, pin 2 +, pin 3 -
Input level for 100 dB SPL output at 1 m:	-6 dBu at volume control max
Sensitivity control range relative to max output:	-12 dB (constantly variable)
Crossover frequency, Bass/Treble:	3.0 kHz
Treble tilt control operating range:	0 to -2 dB at 15 kHz
Desktop 200 Hz control:	-4 dB at 200 Hz
Bass roll-off control:	-4 dB at 65 Hz
Bass tilt control operating range in -2 dB steps:	0 to -6 dB at 100 Hz

The 'CAL' position is with all tone controls set to 'off' and the input sensitivity control to maximum (fully clockwise).

AMPLIFIER SECTION

Bass amplifier output power:	50 W
Treble amplifier output power:	50 W
Long term output power is limited by driver unit protection circuitry.	
Amplifier system distortion at nominal output: THD	≤ 0.05 %
Mains voltage:	100-240 V AC, 50-60 Hz
Voltage operating range:	±10 %
Power consumption:	Idle 3 W Standby <0.5 W Full output 60 W

8020D

Aktiivikaiutin

Yleistä

GENELEC 8020D on pienikokoinen, mutta erittäin suorituskykyinen aktiivikaiutin. Se soveltuu lähikenttämonitoriksi äänitysstudioihin, ulkolähetyssautoihin, radio- ja TV-lähetysten äänen tarkkailuun, julkisiin tiloihin, installaatioihin, kotistudioihin, multimediatuotantoon, tietokoneiden audiojärjestelmiin ja kotiteattereihin. Kaiuttimeen on integroitu päätevahvistimet, säädettävä aktiivinen jakosuodin ja kaiutinelementtien ylikuormitussuojauspiirit. Uusi Minimum Diffraction Enclosure™ (MDE™)-kotelorakenne ja edelleen kehitetty Directivity Control Waveguide™ (DCWT™)-suuntain takaavat tasapainoisen toiston vaikeissakin akustisissa ympäristöissä. Tarvittaessa 8020D:n bassotoistoa voidaan tukea Genelec-subwooferilla.


Liitännät

Kaiuttimien mukana toimitetaan suojavaadoitetut verkkovirtajohdot. Älä kytke kaiutinta suojavaadoittamattomaan pistorasiaan.


Ennen kuin teet mitään kytkentöjä, varmista, että kaikista laitteista on kytketty virta pois. Kaiuttimen virtakytkin on sijoitettu liittimiin väliin kaiuttimen takalevyyn. Audiosignaalialia varten kaiuttimissa on balansoitu 10 kOhm:in XLR-liitin, johon äänilähteeltä tuleva signaalijohto kytketään. Ellei äänilähteessä ole balansoitua antolitintää, voidaan käyttää kuvan 2 mukaisesti kytkettyä signaalijohtoa.

Genelec 8020D-aktiivikaiuttimet saa kytkeä ainoastaan linjatasoista signaalialia antavaan äänilähteeseen, ei milloinkaan päätevahvistimen tai integroidun vahvistimen kaiuttimiin.


Kytke virta päälle kun kaikki liitännät on tehty.

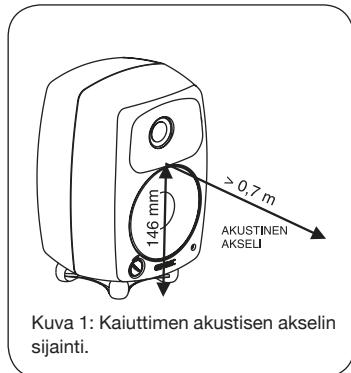

Kuva 1: Kaiuttimen akustisen akselin sijainti.

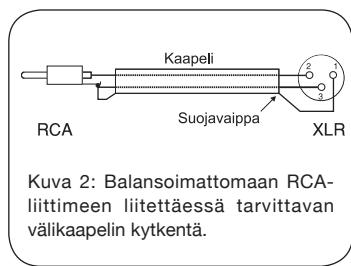

Kuva 2: Balansoimattomaan RCA-liittimeen liitettäessä tarvittavan välikaapelin kytkentä.

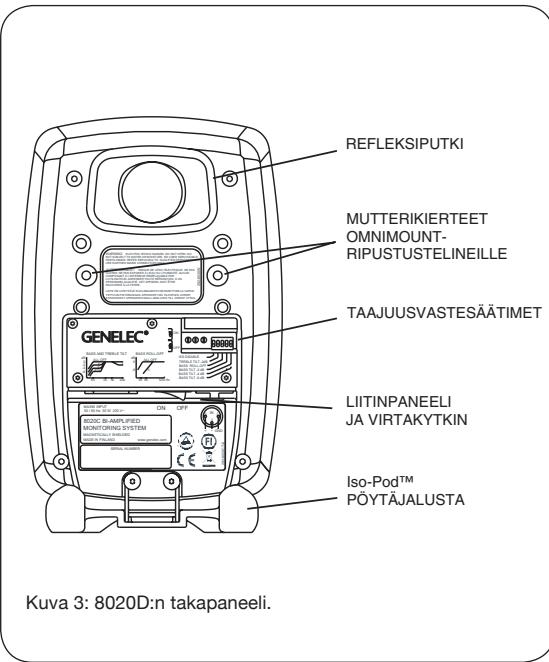

Kuva 3: 8020D:n takapaneeli.

Automaattinen virrankytkevä (ISS™ Autostart)

Kun kaiuttimen takapaneelissa oleva "ISS"-kytkin on asennossa "ON", kaiuttimen automaattinen virrankytkevä on käytössä. Tällöin kaiutin tunnistaa siihen syötetyn äänisignaalin ja kytkkeytyy pääle automaattisesti. Vastaavasti kaiutin menee valmiustilaan, kun signaalin päättymisestä on kulunut noin tunti. Valmiustilassa kaiuttimien tehonkulutus on alle 0,5 W.

Automaatisessa käynnistymisessä on pieni viive. Jos tämä ei ole hyväksyttävä, automaattinen virrankytkevä voidaan poistaa toiminusta käänämällä "ISS"-kytkin kaiuttimen takapaneelissa asentoon "OFF." Tällöin kaiutin käynnistyy ja sammuu ainoastaan virtakytkintä käytteen.

Herkkyyden säätö

Kaiuttimen ottoliitännän herkkys (äänenvoimakkuus) voidaan säätää sopivaksi takapaneelissa olevalla säätimellä (kuva 3).

Taajuusvastesäätiöiden käyttö

Kaiuttimen taajuusvastetta voidaan muokata kuuntelutilan akustisista ominaisuuksista ja kaiuttimien sijoituksesta johtuvien toistovirheiden kompensoimiseksi. Säätö tehdään kaiuttimen takapaneelissa olevien "Desktop 200 Hz"-, "Treble tilt"-, "Bass tilt"- ja "Bass roll-off"-kytkimien avulla. Kaikki sääädöt on asetettu tehtaalla asentoon "OFF", mikä antaa tasaisen taajuusvasteen kaiuttomassa tilassa. Säätiöiden vaikutus toistovasteeseen on esitetty kuvassa 4.

Kaiuttimien sijoitus	Desktop	Treble tilt	Bass tilt	Bass roll-off
Kaiuttomassa tilassa	OFF	OFF	OFF	OFF
Vapaasti seisovana vaimennetussa tilassa	OFF	OFF	OFF	OFF
Vapaasti seisovana kaikuvassa tilassa	OFF	OFF	-2 dB	OFF
Lähikentässä, heijastavan tason päällä	ON	OFF	-4 dB	OFF
Lähellä seinää	OFF	OFF	-6 dB	OFF
Pöydän tai muun tason päällä	ON	OFF	-2 dB	OFF

Taulukko 1: Suositeltavat taajuusvastesäätimien (tone control) asetukset kaiuttimien sijoituksen mukaan

Suosittelemme akustisen mittausjärjestelmän (esim. WinMLS) käyttöä kaiuttimien säätämisessä. Ellei tällästa ole käytettäväissä, säätö voidaan tehdä myös korvakuoulta sopivia testiäänitteitä ja -signaaleja hyväksikäytäen. Taulukko 1 sisältää muutamia suuntaa-antavia säätöesimerkkejä. Kaiuttimien sijoitus ja akustinen ympäristö vaikuttaa ratkaisevasti säätötarpeeseen, joten säätöön kannattaa ryhtyä vasta kun kuuntelutilan järjestys on saatu lopulliseen muotoonsa.

Desktop 200 Hz

Desktop-säätö (kytkin 2) aktivoi 4 dB:n vaimennuksen 200 hertsin kohdalle kompensoimaan äänipöydän, pöytätason tai muun kaiuttimen ja kuuntelijan välissä sijaitsevan vaakasuoran tason aiheuttaman korostuman.

Treble tilt

Treble tilt-säätö (kytkin 3) vaimentaa kaiuttimen diskantitoista 5 kHz:n yläpuolella 2 dB, mitä voidaan käyttää liian kirkkaalta tuntuvan toiston korjaamiseen.

Bass tilt

Bass tilt-säädön avulla voidaan vaimentaa kaiuttimen bassotoista 2 kHz:n alapuolella. Tämä on usein tarpeen, kun

kaiutin sijoitetaan lähelle seinää tai muuta rajapintaa. Vaimennustasoja on kolme: -2 dB (kytkin 6 "ON"), -4 dB (kytkin 7 "ON") ja -6 dB (kytkimet 6 ja 7 "ON").

Bass roll-off

Bass roll-off-säätö (kytkin 4) aktivoi 4 desibelin vaimennuksen alimille taajuuksille (65 Hz). Tätä voidaan käyttää seinän tai muun rajapinnan aiheuttaman bassokorostuksen vaimentamiseen.

Kaiuttimien sijoitus

Kohdista kuuntelupisteesseen

Suuntaa kaiuttimet kuuntelualueen keskipisteeseen pään korkeudelle. Suuntaus on tehty oikein, kun kaikkien kaiuttimien akustiset akselit (kuva 1) leikkaavat kuuntelupisteessä. Kaiuttimet kannattaa sijoittaa pystyasentoon, sillä se minimoi vaihevireet jakotaa juudella.

Sijoita symmetrisesti

Sijoita kaiuttimet samalle etäisyydelle kuuntelupisteestä ja mahdollisimman symmetrisesti sekä toistensa, että huoneen rajapintojen suhteeseen. Tämä toteutuu, kun kuuntelupiste on huoneen keskilinjalla ja kaiuttimet sijoitetaan symmetrisesti keskilinjan suhteeseen.

Minimoi heijastukset

Kaiuttimen lähellä sijaitsevista esineistä ja pinnoista tulevat akustiset heijastukset voivat aiheuttaa toiston värittymistä ja sumentaa äänikuvaa. Tämä kannattaa ottaa huomioon kaiuttimia sijoitettaessa ja mahdollisuksien mukaan siirtää heijastuksia aiheuttavat tietokoneen näytöt, kaapit tms. pois kaiuttimien läheltä. Kaiuttimet tulee sijoittaa mahdollisimman kauas heijastuksia aiheuttavista pinnoista. Tarkkailukaiuttimia ei esimerkiksi kannata sijoittaa äänipöydän päälle, vaan riittävän korkeille lattiajalustolle äänipöydän taakse, josta ne voidaan suunnata alas äänitarkkailjaa kohti.

Vähimmäisetäisydet

Vahvistimien jäähdtyksen ja refleksiputken toiminnan taakaamiseksi pitää kaiuttimien taakse, sivulle ja päälle jäädä kuunteluhuoneeseen avautuva, vähintään kolmen senttimetrin vapaatila. Kaiutinta ei saa käyttää tilassa, jonka lämpötila on yli 35° C.

Pöytäjalusta ja kiinnitysmahdollisuudet

Kaiuttimien mukana toimitettava Isolation Positioner/De-coupler™ (Iso-Pod™) -jalusta mahdollistaa kaiuttimen kallistamisen ylä- tai alaviistoon. Genelec 8020D voidaan kiinnittää Omnimount® Series 20.5-kaiutintelineisiin kaiutinkotelon takaseinässä olevien M6x10 -mutterikierreiden avulla. Kotelon pohjassa on 3/8 in UNC -mutterikierre, jolla kaiutin voidaan kiinnittää mikrofonitelineeseen.

Turvallisuusohjeita

Genelec-aktiivikaiuttimet on suunniteltu ja valmistettu täyttämään kansainväliset turvallisuusnormit. Virheellisestä käytöstä saattaa kuitenkin seurata vaaratilanne, joten seuraavia ohjeita on aina noudatettava:

- Laitetta ei saa asettaa alttiikki kosteudelle tai roiskevedelle. Se on tarkoitettu käytettäväksi ainoastaan kuivassa huonetilassa.

- Huolto- ja korjaustoimia saa suorittaa vain valmistajan valtuuttama huoltohenkilöstö.
- Älä avaa kaiutinkoteloa tai irrota laitteesta mitään osia.
- Laitteen saa kytkeä ainoastaan maadoitettuun pistorasiaan.
- Huomaa, että kaiutin ei ole täysin jännitteeton ellei virtajohtoa ole irrotettu pistokkeesta.

VAROITUS!


Genelec 8020D-aktiivikaiuttimet pystyvät tuottamaan yli 85 desibelin äänenpaineen, mikä voi aiheuttaa pysyvän kuulovaurion.

Huolto


Kaikki huolto- ja korjaustoimet on annettava valmistajan tai valmistajan valtuuttaman huoltohenkilöstön suoritettaviksi. Älä avaa laitetta itse.

Takuu

Genelec Oy antaa tuotteilleen kahden vuoden takuun ostopäivästä lukien. Takuu kattaa valmistusvirheet ja materiaaliviat.

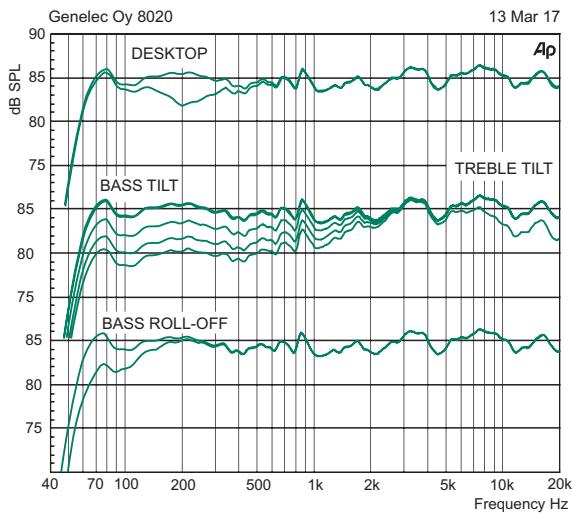

Kuva 4: Taajuusvastesäätimien vaikutus 8020D:n toistovasteeseen.

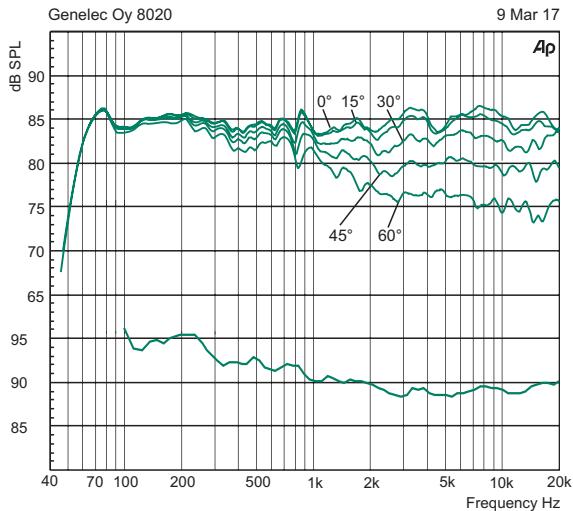

Kuva 5: Ylemmät käyrät esittävät 8020D:n taajuusvasteen eri kulmista mitattuna (kaiutin pystyasennossa, mittausetäisyys 1 m). Alempi käyry on kaiuttimen tehovaste.

TEKNISET TIEDOT

Alarajataajuus, -6 dB: ≤ 56 Hz

Ylärajataajuus, -6 dB: ≥ 25 kHz

Taajuusvaste vapaakentässä:
62 Hz – 20 kHz ($\pm 2,5$ dB)

Hetkellinen maksimiäänenpaine mitattuna sinisignaalilla puoliavaruuteen. Keskiarvo taajuusalueella 100 Hz...3 kHz:
 $\text{@ } 1 \text{ m} \geq 100 \text{ dB SPL}$

Suurin jatkuva (RMS) äänenpaine IEC-painotetulla kohinalla mitattuna (elementtien suojaipirin rajoittama):
 $\text{@ } 1 \text{ m} \geq 93 \text{ dB SPL}$

Kaiutinparin tuottama äänenpaineen huippuvarvo (peak) musiikkimateriaalilla 1 metrin mittausetäisyyllä:
 ≥ 107 dB

Akustinen pohjakohinataso 1 m:n etäisyyllä:
 ≤ 10 dBA

Harmoninen särö 85 dB 1m mittausakselillä::
Taajuus: 50...100 Hz < 3 %
>100 Hz < 0.5 %

Kaiutinelementit:
Basso 105 mm (4 in) kartio
Diskantti 19 mm ($\frac{3}{4}$ in) metallikalotti
Molemmat elementit ovat magneettisuojattuja

Paino: 3,2 kg (7.0 lb)

Mitat
Korkeus 242 mm (9 $\frac{1}{2}$ in)
(mukaan lukien Iso-Pod™ pöytäjalusta)
Korkeus 230 mm (9 $\frac{1}{16}$ in)
(ilman Iso-Pod™ pöytäjalustaa)
Leveys 151 mm (6 in)
Syvyys 142 mm (5 $\frac{5}{8}$ in)

JAKOSUODIN

Ottoliitin: XLR naaras, balansoitu 10 kOhm
napa 1 maa, napa 2 +, napa 3 –

Tarvittava signaalitaso 100 dB SPL äänenpaineen tuottamiseen 1 m:n mittausetäisyyllä:
–6 dBu herkkyyslähdön maksimasetuksella

Herkkyyslätimen vaikutus (vaimennus maksimiäänenpaineesta): –12 dB (liukuva)

Jakotaajuus: 3,0 kHz

Treble tilt-säädön vaikutus: 0 ... –2 dB @ 15 kHz

Desktop 200 Hz-säädön vaikutus: 0 ... –4 dB @ 200 Hz

Bass roll-off-säädön vaikutus: –4 dB @ 65 Hz

Bass tilt-säädön vaikutus: 0, -2, -4 tai -6 dB @ 100 Hz

Säätimien 'CAL' asento: Kaikki tajuusvastesäätimet asennossa "off" ja herkkyyden säätö maksimiasennossa.

VAHVISTIMET

Bassoelementin vahvistimen teho: 50 W
Diskanttelementin vahvistimen teho: 50 W
Kaiutinelementtien suojauselektronika rajoittaa vahvistimien jatkuvan tehoa.

Vahvistimien särö nimellisteholla: THD $\leq 0,05$ %

Kohinaetäisyys täydellä teholta:
Basso ≥ 95 dB
Diskantti ≥ 95 dB

Käyttötähtitele: 100-240 V AC 50-60 Hz

Sallittu jännitteenvaihtelu: ± 10 %

Tehonkulutus:
Ilman kuormaa 3 W
Valmiustilassa (ISS) <0,5 W
Maksimikuormalla 60 W

GENELEC®

International enquiries

Genelec, Olivtie 5
FI 74100, Iisalmi, Finland
Phone +358 17 83881
Fax +358 17 812 267
Email genelec@genelec.com

In Sweden

Genelec Sverige
Ellipsvägen 10B
Box 2036
S-127 02 Skärholmen
Phone +46 8 449 5220
Fax +46 8 708 7071
Email info@genelec.com

In the USA

Genelec, Inc., 7 Tech Circle
Natick, MA 01760, USA
Phone +1 508 652 0900
Fax +1 508 652 0909
Email genelec.usa@genelec.com

In China

Beijing Genelec Audio Co.Ltd
B33 - 101
Universal Business Park
No. 10 Jiuxiangqiao Road
Chaoyang District
100015 Beijing, China
Phone +86 10 8580 2180
400 700 1978
Email genelec.china@genelec.com

www.genelec.com

Genelec Document D0088R001d Copyright Genelec Oy 3.2017. All data subject to change without prior notice